

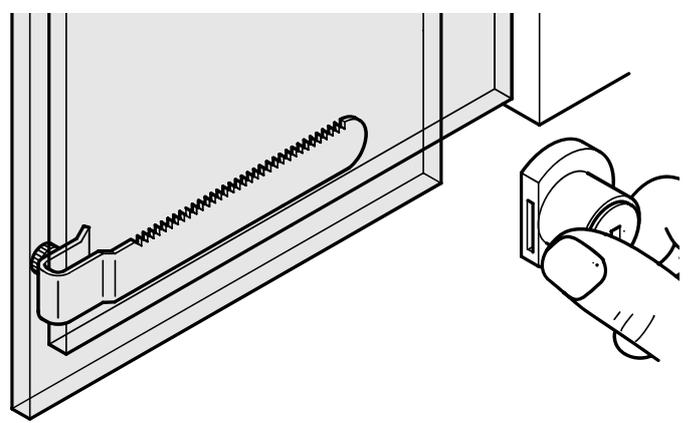


On closing the doors, slide the cylinder to the left and lock onto the rack

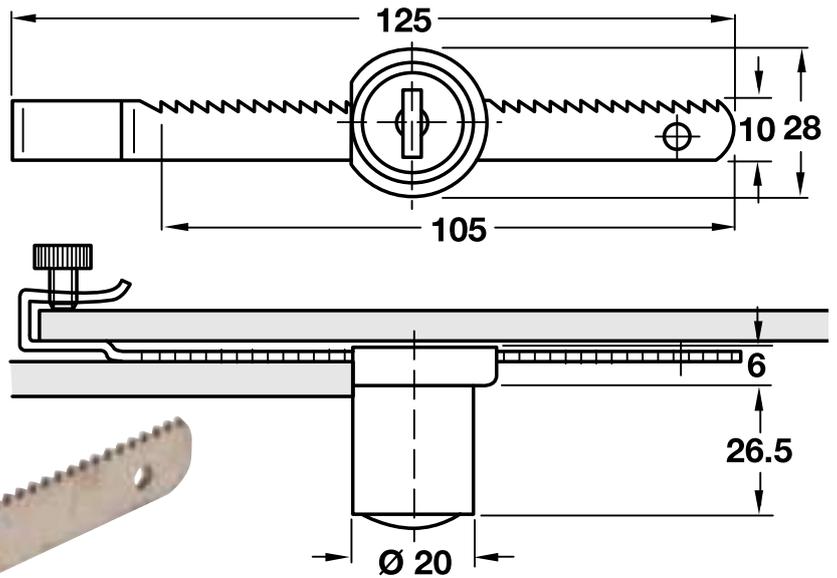

To open, remove the cylinder from the right hand end of the rack

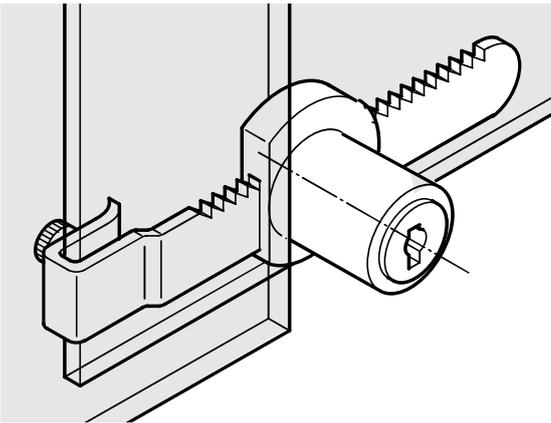

B Glass door cylinder lock with rack

- For glass panels from **4-8 mm**
- **5 plate levers** = 100 possible key changes
- Matt nickel-plated steel rack
- Matt nickel-plated zinc alloy housing and cylinder
- **Accessories:** 2x keys