


G : EXCEPT HINGES - LDA03 & LDA04

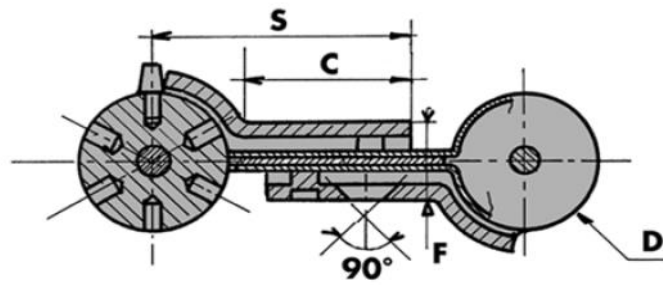


	A1	A2	B	C	D	E	F	G	H	J	K	L	M	N	P	Q	R	S
<i>DELDA03 / 29</i>	78	95	75	20	19	47	11	7.5	12.5	10	24			2	3	5.5	8	33
<i>DELDA04 / 30</i>	103	120	100	25	21	54	11	8	16	11	27			2	3	5.5	8	40
<i>DELDA05 / 33</i>	128	147	125	30	22.5	62.5	12.5	11	21	12	35	62.5		2	3.9	5.5	8	45
<i>DELDA06 / 36</i>	153	172	150	35	25	70	14.5	17	22	14	37	75	10	2.5	4.5	5.5	8	52
<i>DELDA07 / 39</i>	179	203	175	40	29	78	16.5	18.5	29	15	42.5	87.5	11	3	5.4	7	11	59
<i>DELDA08 / 42</i>	202	228	198	45	32	85	17	23.5	34	14	43	99	11	3	6	7.2	11	65.5

Characteristics common to all the Liobex hinge models							
	Model No.	LDA03	LDA04	LDA05	LDA06	LDA07	LDA08
Height of Leaf	mm	75	100	125	150	175	200
	inch	3	4	5	6	7	8
To suit door thickness	mm	20 - 25	21 - 30	25 - 35	25 - 40	33 - 50	35 - 55
To suit max door width	mm	650	700	780	850	920	1000
Characteristics specific to the Liobex Compact range							
Weight of the hinge - pair	Kg	0.75	1.120	1.620	2.510	3.670	4.850
Max torque at 90° - per hinge	daN	0.250	0.350	0.500	0.700	0.850	1.200
Max weight of door - per pair	Kg	10	15	25	35	45	55
Fixing screws recommended - Countersunk Screw		4 x 20	4 x 20	4 x 25	4.5 x 25	6 x 30	6 x 30
Characteristics specific to Liobex 'décor' range - with end caps							
Weight of the hinge - pair	Kg	1.070	1.680	2.400	3.310	4.850	6.370
Max torque at 90° - per hinge	daN	0.400	0.500	0.600	0.950	1.000	1.400
Max weight of door - per pair	Kg	12	20	30	40	50	70
Fixing screws recommended - Countersunk Screw		4 x 20	4 x 25	4.5 x 25	5 x 25	6 x 30	6 x 30

Installation of Liobex double action spring hinges

To install Liobex double action spring hinges correctly it is necessary to have or fix a plant down the hanging frame. Ideally the width of the plant should be the same dimension as the thickness of the door. The thickness of the plant should be sufficient to allow the leaf of the hinge to rotate freely around the knuckle, after the lipped face (C) has been mortised in. The other lipped face should be mortised into the door, ensuring that both leaves are free to rotate and that the standard door plant clearance is maintained.

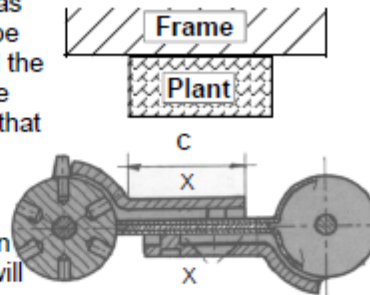

Where applicable the capstan should be located at the top on the plant, and at the bottom on the door. This configuration will ensure optimum efficiency and minimum wear. Hinges where the capstans are located at the same end, should be installed with the capstans at the top.

Normal installation should be 250mm from the top and bottom of the door. In the event of a door being oversize, a third hinge may be fitted 100mm below the top hinge. Care must be taken to ensure that the centre line of the hinges is in alignment.

***On fire rated 'EI 30' & 'EI 60' models the supplied intumescent must be stuck to the outer edge (X) covering area 'C' of each hinge leaf and appropriately trimmed.
Failure to install the supplied intumescent will invalidate the Fire Certificate!***

Adjustment

Normal operation of the hinge is achieved by tightening both capstans on each hinge and inserting the pins provided. Normally the top hinge (s) will not require more than three holes, and the bottom hinge two holes.

DO NOT OVERTIGHTEN THE CAPSTANS

Maintenance

Liobex Spring Hinges are lubricated before despatch. We recommend annual lubrication to maintain trouble free operation.

